USB Peripheral Family

ALU-131

USB to Serial Link

Serial to USB Adapter

User's Guide

Downloaded from www.Manualslib.com manuals search engine

Introduction :

The Universal Serial Bus (USB) is designed to replace the current serial, parallel, and other ports on a PC with a single universal interface. This USB Serial Converter provides an easy way to connect USB ports to legacy RS232 interface peripherals. The ALU-131 supports serial transmission at all common legacy device. It also has the ability to enroll as a PC COM port.

Products Features :

- Compatible IBM PC with Pentium™ processor and USB connectivity.
- Complete RS-232 modem control signals.
- Provide RS-232 serial port (DB-9M).
- No IRQ , I/O address or DMA's required.
- Transmission Speed up to 56Kbps.
- Supports either Self-powered or Bus-powered mode.
- Supports Windows 98®

Hardware Requirement :

- IBM 486 compatible processor or higher
- Equipped with USB port

Operating Systems Requirement :

- Microsoft Windows 98®

Step 1 : To turn on your PC
Step 2 : Plugging its A-Type connect into your PC USB port
Step 3 : The Windows 98 will guide you through to install the unit, just follows the figures below :

Downloaded from www.Manualslib.com manuals search engine

Step 1: This wizard will find the product.

Press Next button to continue.....

Add New Hardware Wizard
This wizard searches for new drivers for:
FTDI EVALUATION USB - Serial
A device driver is a software program that makes a hardware device work.
< Back
Next >
Cancel

Step 2: Press Next button to continue.....

Add New Hardware Wizard
What do you want Windows to do?
Search for the best driver for your device. (Recommended)
Display a list of all the drivers in a specific location, so you can select the driver you want
< Back
Next >
Cancel

Downloaded from www.Manualslib.com manuals search engine

Step 3: Please to insert a disk into the floppy disk drives. Choose the "Floopy disk drivers" and click "Next" to continue.....

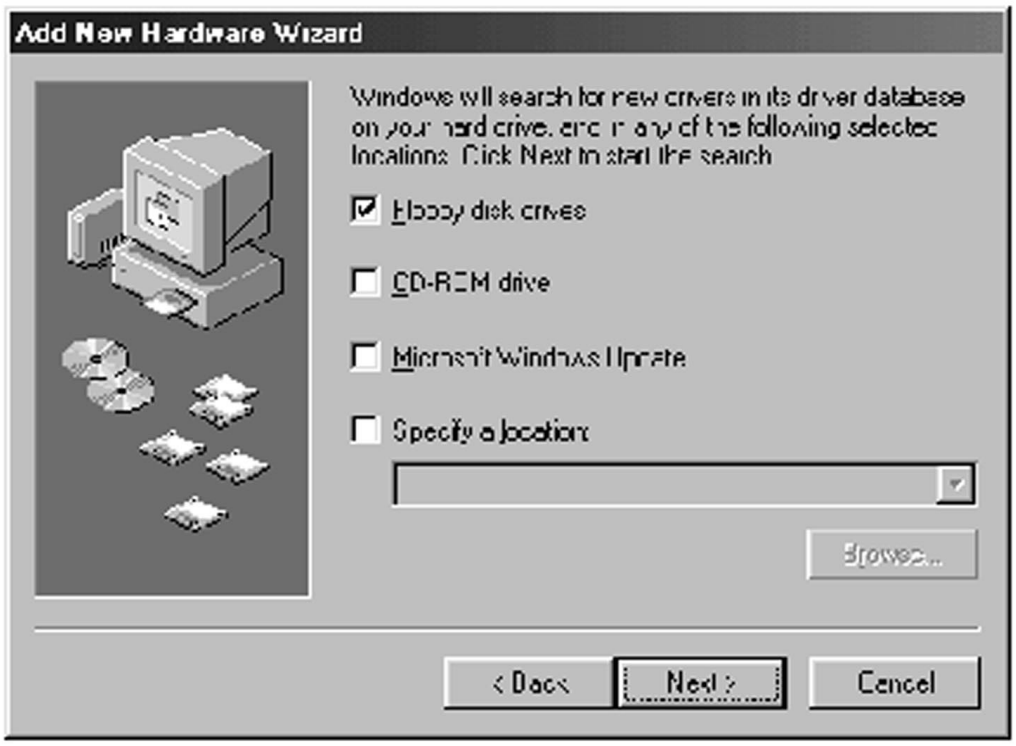

Step 4: Press Next to continue.....

Downloaded from www.Manualslib.com manuals search engine

Step 5: Copying files to hard disk from floopy disk.

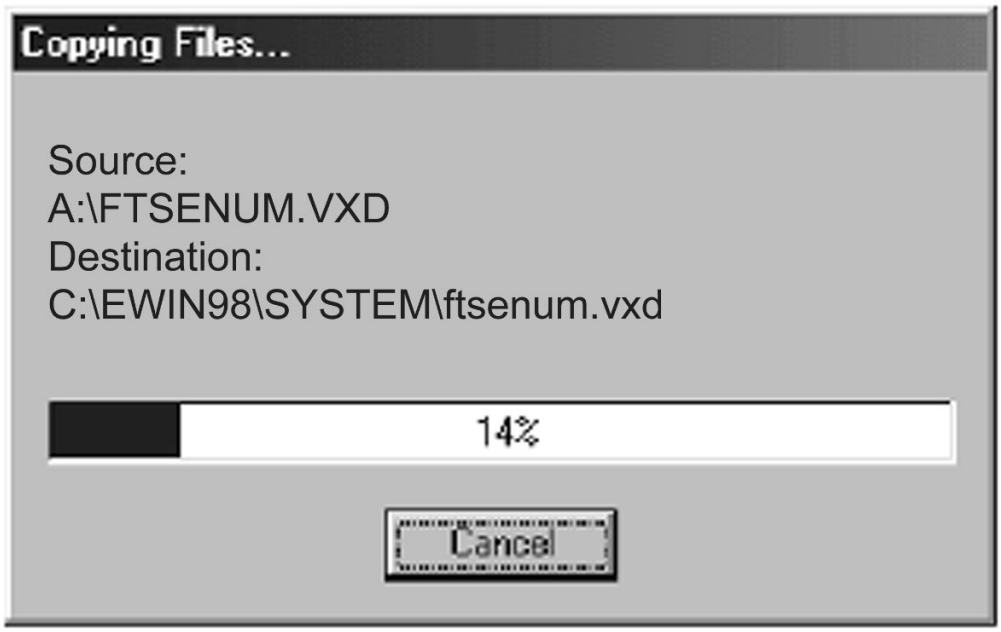

Step 6: Installation has competed click Finish to continue...

Downloaded from www.Manualslib.com manuals search engine

Uninstall Drivers:

1. To click a Control Panel--Add / Remove Program icon.
2. Choose a "Acer USB Serial Link Drivers", after to click a "Add / Remove" button.
3. To click "OK" begine on remove the drivers, else to click "Cancel" quit it.

Downloaded from www.Manualslib.com manuals search engine

Product Limited Warranty

Acer Netxus Incorporated (ANI) warrants its product to be free from defects in materials and workmanship, under normal use and service, for the following lengths of time from the date of purchase from ANI or its Authorized Resellers.

AcerUSB Serial Link One-year

All products with limited lifetime warranty have a standard one-year warranty. This warranty does not cover the product if it is damaged by abuse, accident, misuse, improper installation, or improper testing. If a product does not operate as warranted during the applicable warranty period, ANIshall, at its option and expense, either repair the defective product or part returned to ANI, or deliver to customer an equivalent product or part to replace the defective item. Definitely, all products that are replaced will become the property of ANI. Replacement products may be new or reconditioned. Any replacement or repaired product or part has a ninety days warranty or the remainder of the initial warranty period, whichever is longer. ANIshall not be responsible for any software, firmware, information, or memory data of customer contained in, stored on, or integrated with any products returned to ANI pursuant to any warranty. Before you obtain warranty service, you must request an RMA (Return Materials Authorization) number by calling, faxing or writing ANI's Customer Service Department at the numbers listed below. You must use the original container (or the equivalent) and pay the shipping charge.

ANI SHALL NOT BE HELD LIABLE FOR INCIDENTAL, CONSEQUENTIAL, INDIRECT, SPECIAL OR RUNTIME DAMAGES OF ANY KIND; OR FOR LOSS OF REVENUE, LOSS OF BUSINESS, OR OTHER FINANCIAL LOSS ARISING OUT OF OR IN CONNECTION WITH THE SALE, INSTALLATION, MAINTENANCE, USE, PERFORMANCE, FAILURE, OR INTERRUPTION OF ITS PRODUCTS, EVEN IF ANI OR ITS AUTHORIZED DEALER HAS BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGES.

Trademarks

All company, brand and product names are trademarks or registered trademarks of their respective companies.

Downloaded from www.Manualslib.com manuals search engine

If you purchased this product in the UNITED STATES, some states do not allow the limitation or exclusion of liability for incidental consequential damages, so the above limitation may not apply to you.

Contact us:

Acer Computer International Ltd.
Taiwan Branch
Tel: 886-2-2713 9099 ext.7293
Fax: 886-2-2718 4895
http://www.aci.acer.com.tw

Acer America Corporation
Tel: 1-408-432 6200
Fax:1-408-922 2993
http://www.acer.com/aac

Distribution/Information

Hotline: 1-800-369 6736
Fax: 1-408-432 0496
http://www.acer.com/aac/aod

Acer Latin America Inc.
Tel: 1-305-392 7200
Fax:1-305-392 7216

Acer Japan Corporation
Tel: 81-3-5434 7373
Fax: 81-3-5434 7533

Acer Computer B.V.
Tel: 31-73-645 9645
Fax: 31-73-645 9599

Acer UK Limited
Tel: 44-1628-533422
Fax: 44-1628-524071
http://www.aceruk.co.uk

Acer Computer France S.A.R.L.
Tel: 33-1-4817 4040
Fax: 33-1-4817 4089

Acer Computer GmbH
Tel: 49-4102-488-0
Fax: 49-4102-488-101

Dealers' Information
Hotline: Germany 0180-3234781

End users' Information
Hotline: Germany 0180-5009898

Acer Computer Iberica, S.A.
Tel: 34-3-499-0303
Fax: 34-3-499-0483

Acer Italy/Texas Instruments
Tel: 39-2-2692-2565
Fax: 39-2-2692-1021

Acer Computer B.V.
Tel: 31-73-645 9645
Fax: 31-73-645 9599

Acer Netxus Incorporated
A Communications Company of Acer

7F, 82, Sec. 1 Hsin Tai Wu Road
Hsichih, Taipei Hsien, 221, Taiwan
Tel: 886-2-2696 4288 Fax: 886-2-8691 2372
Customer Service: 886-2-8691 2332
http://www.acernetxus.com.tw
E-mail: netxus@acer.com.tw

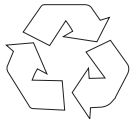

P/N 49.24004.001

Downloaded from www.Manualslib.com manuals search engine